

ANARE Ski Lodge is a Non Smoking establishment.



Operating the Heating.

Ducted heating control - Downstairs.

Ducted heating is delivered to the drying room and bathrooms downstairs as well as to the middle level. It takes about 15 minutes to warm the lodge once started.

To start heating,

Gas and power must be on, the Control Panel is located near the stairs on the lower level.

Open the control panel door and press 'Heat'. The display panel will indicate that heat has been turned on. Set temperature between 16 and 18 degrees.

Turn ducted heating off overnight to avoid overheating the sleeping area at the upper level of the lodge.

To turn off

Press the 'Heat' button. The 'Heat' button is a toggle (press for on, press for off)

