

ANARE Ski Lodge is a Non Smoking establishment.



Gas Fire.



The Gas Fire at the middle level can be used instead of the ducted heating in mild conditions.

Master Switch on the wall controls the Gas Fire and a return air fan. The return air fan draws warm air from the upper level down to the middle level.

The **red light** on the Master Switch indicates power to the Gas Fire is **on**. The Master Switch has a timer that shuts off after 15 hours. Press master switch to turn it back on.

Heater Settings - There are 3 heat levels: 'High', 'Medium' and 'Low'.

ANARE Ski Lodge is a Non Smoking establishment.



To start the Gas Fire:

1. **Press** Master Switch on wall
2. At left, front of Gas Fire **open control panel** push-door
3. Press rocker switch for desired setting:
 - Both up for off (OO)
 - Left switch down for low (IO)
 - Right switch down for medium (OI)
 - Both down for high (II)

Switch to Low or Medium once the lodge is at a comfortable temperature.

Turn heating off overnight to avoid overheating the sleeping area at the upper level of the lodge.

Shutting down Gas Fire:

1. At left front of Gas Fire **open control panel** push-door
2. Select both switches up (OO) to off
3. Fan continues to operate for 10 minutes until Gas Fire has cooled
4. When closing down lodge turn off the master switch on wall.