

**ANARE Ski Lodge is a Non Smoking establishment.**



## **Gas Fire.**



The Gas Fire at the middle level can be used instead of the ducted heating in mild conditions. The Gas Fire and a return air fan are controlled from the **Master Switch on the wall**. The red light on the Master Switch indicates power to the Gas Fire is on. The Master Switch has a timer that shuts off after 15 hours. Press master switch to turn it back on.

**Heater Settings** - There are 3 heat levels: 'High', 'Medium' and 'Low'.

# ANARE Ski Lodge is a Non Smoking establishment.



## To start the Gas Fire:

1. Press Master Switch
2. Open push-door of the control panel at left front of Gas Fire
3. From the control panel select:
  - Left switch down (OI) for low
  - Right switch down (IO) for medium
  - Both down (OO) for high

Switch to Low or Medium once the lodge is at a comfortable temperature to reduce overheating the upper level and to reduce greenhouse gas emissions.

Turn heating off overnight to avoid overheating the sleeping area at the upper level of the lodge.

## Shutting down gas heater

1. Push open Control Panel at left front of Gas Fire
2. Select both switches up (II) to off
3. Fan will continue to operate for 10 minutes until Gas Fire has cooled
4. When closing lodge turn off the master switch.